

Assembly instructions

Spend a little Live a lot




FOOTBALL GOAL WITH TARGETS







Contents


Overview	3
Use	4
Pack contents/device parts	6
General information	
Reading and storing the instructions	7
Explanation of symbols	7
Safety	8
Proper use	8
Safety notes	8
Assembly	9
Checking the football goal and pack contents	9
Assembling the goal frame	10
Securing the net	
Attaching the goal wall	
Safely setting up the football goal	
Maintenance and care	11
Storage	11
Technical data	12
Declaration of conformity	12
Disposal	
Disposing of the packaging	12
Disposing of the football goal	
Warranty card	13
Warranty conditions	14

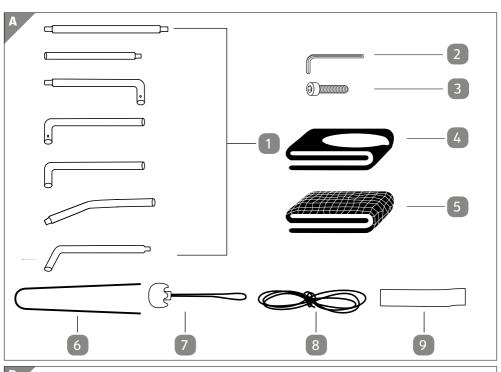


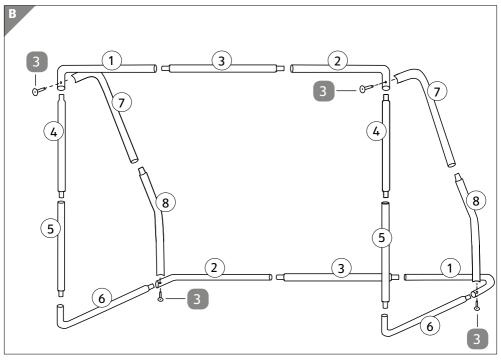


4 GB IRE

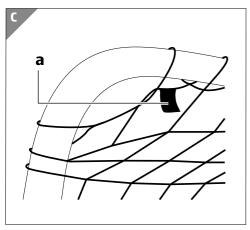

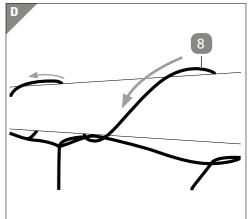


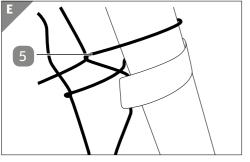

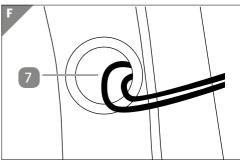





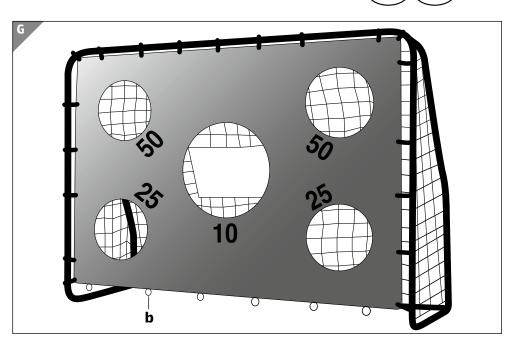

Pack contents/device parts

- 1 Poles for the goal frame (numbered for easier assembly), 16×
- 2 Hex key
- 3 Screws, 4×
- 4 Goal wall
- 5 Net
- 6 Pegs, 11×
- 7 Toggle lock (toggle ball), 19×
- 8 Attachment cords, 5×
- 9 Spare velcro strips, 4×



General information

Reading and storing the instructions



These assembly instructions accompany this football goal with targets. It contains important information on assembly and handling.

For improved readability, the "football goal with targets" will be referred to only as the "football goal" below.

Read the assembly instructions carefully before assembling the football goal. This particularly applies to the safety notes. Failure to heed these assembly instructions may result in severe injury or damage to the football goal.

The assembly instructions are based on the standards and rules in force in the European Union. When abroad, you must also observe country-specific guidelines and laws.

Hold onto the assembly instructions for future reference. If you pass the football goal on to third parties, be absolutely sure to include these assembly instructions.

These assembly instructions can also be downloaded as a PDF file from our homepage **www.flexxtrade.de**.

Explanation of symbols

The following symbols and signal words are used in these assembly instructions, on the football goal or on the packaging.



This signal symbol/word designates a hazard with moderate degree of risk which may lead to death or severe injury if not avoided.



This signal word warns against potential damages to property.



Declaration of conformity (see chapter "Declaration of conformity"): Products marked with this symbol meet all applicable Community regulations for the European Economic Area.



The GS/certified safety seal verifies the conformity of the football goal with the German Product Safety Act (ProdSG).



Safety

Proper use

The football goal is only intended for private use for playing football in home gardens and is not suitable for commercial purposes.

Only use the football goal as described in these assembly instructions. Any other use is deemed improper and may result in damage to property or even personal injury.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

Safety notes

A WARNING!

Risk of suffocation!

Children can become trapped in the packing film when playing and suffocate.

 Do not allow children to play with the packing film and the small parts (e.g. screws) contained in the packing

A WARNING!

Risk of injury!

Tipping over of the football goal could result in serious injury.

- The goal frame and the net must not be used as a climbing structure. Your child could be seriously injured if he/she falls or the football goal topples. Therefore, children should be supervised during play.
- Always set up the football goal on a flat surface and anchor it firmly to the ground with the provided pegs. The football goal must not be used if it is not firmly secured against tipping over.
- Secure the football goal against tipping over also when not in use.

- The pack contents contain many parts to be inserted.
 Be careful to avoid pinching your hands.
- Only use the football goal if it is not damaged. Therefore, inspect all parts for damage and secure assembly before every use. This particularly applies to the screw and pipe connections.
- Remove any accumulation of rust on the football goal to avoid greater damage.
- Only adults may assemble the football goal.

NOTICE!

Risk of damage!

An unsuitable location can result in damage to property while playing football.

 Keep a minimum distance of 3 metres from other objects (such as electrical cables, potted plants, etc.).

Assembly

Checking the football goal and pack contents

NOTICE!

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointy object, you may quickly damage the football goal.

- Be very careful when opening it.
- 1. Take the football goal out of the packaging and check whether the football goal or the individual parts exhibit damages. If this is the case, do not use the football goal. Contact the manufacturer at the service address specified on the warranty card.
- 2. Check to make sure that the delivery is complete (see **fig. A** and the list on **page 6**).



Assembly

Assembling the goal frame

- The individual goal poles are marked with numbers. Assemble the football goal as shown in **fig. B**.
- Assemble the football goal preferably with another person.
- Lightly oil the plug connection on the small ends before assembling. This makes assembly easier.

Securing the net

- 1. Spread the net 5 out on the ground. The small, sewn-in flags **a** mark the upper left and right corners (see **fig. C**).
- 2. Place the net over the upper frame (1) (poles 1, 2 and 3) and the rear inclined goal bars (poles 7 and 8).
- 3. Attach the net to the rear inclined poles 7 and 8 with the sewn-on velcro strips to secure the proper position in (see **fig. E**).
- 4. Attach the net to the poles with the attachment cords 8 provided. To do so, tie the end of an attachment cord at the upper end of pole 7 and simply thread the attachment cord through the upper edge of the net and around poles 1, 2 and 3 (see **fig. D**).
- 5. Further thread it along poles 4, 5, 6 and 1, 2, 3 below and again along 4, 5, 6 upwards until the original starting point.
- 6. Knot the end of the attachment cord there.

Attaching the goal wall

- Attach the goal wall 4 to the frame with the toggle locks 7 provided (see fig. F). The rubber eyelets b must be facing downward (see fig. G).
 Be sure that the toggle locks (toggle balls) are located on the back sides of the goal poles 1 so that they do not open upon impact with balls.
- 2. Secure the rubber eyelets **b** to the ground with the pegs 6 provided.



Safely setting up the football goal

A WARNING!

Risk of injury!

Tipping over of the football goal could result in serious injury.

- Always set up the football goal on a flat surface and anchor it firmly to the ground with the provided pegs. The football goal must not be used if it is not firmly secured against tipping over.
- Before using pegs, make sure that the ground is suitable (e.g. there must not be any water pipes for garden sprinklers).
 - 1. Insert a peg 6 each centred on the left and right crossbar (pole 6) and secure them into the ground.
- 2. Insert three additional pegs at even distances along the back crossbar (poles 1, 2 and 3) and secure them into the ground.
- 3. Should securing the goal with pegs not be possible due to the ground conditions. use other appropriate means (such as sand bags) to prevent the football goal from tipping over.

Maintenance and care

NOTICE!

Risk of damage!

Improper handling of the football goal may result in damage.

- Do not use any aggressive cleaners, sharp or metallic cleaning utensils such as knives, hard scrapers or similar items. These could damage the surfaces.
- If necessary, clean the poles and textile surfaces with a soft, damp cloth.

Storage

 Make sure that all parts of the football goal are stored in a dry and weather-proof location. You can use the original packaging for this purpose.



Technical data

Technical data

Type: FLX-02-TW

Article number: 93282

Dimensions ($W \times H \times D$): approx. 240 × 170 × 85cm

Galvanised metal rods: 32mm ø Goal net thickness: 2_{mm}

Goal wall dimensions (W × H): approx. 224 × 154.5cm

As our products undergo continual development and improvement, technical changes and changes to the product design are possible.

These assembly instructions can also be downloaded as a PDF file from our homepage www.flexxtrade.de.

Declaration of conformity



The product is guaranteed to conform with legally prescribed standards. For the complete declaration of conformity, visit the website www.flexxtrade.de

Disposal

Disposing of the packaging



Dispose of the packaging separated into single type materials. Dispose of cardboard and carton as waste paper and foils via the recyclable material collection service.

Disposing of the football goal

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)

If the football goal can no longer be used, enquire at your local authority (community/district) as to how you must dispose of the football goal.





WARRANTY CARD FOOTBALL GOAL WITH TARGETS

Your details: Name				
Address				
Address				
-				
~		_E-mail ¹		
Date of purchase	!			
* We recommend ye	-	eipt with this w	arranty card.	
¹ For status reports	or repair			
Location of purch	ase			
•				
			= =	



If after contacting the manufacturer you are requested to return the faulty product please return the completed warranty card together with it.

Aŀ	IEK	SALES	SUP	PUKI

GB 00800/78747874 (free of charge, mobile networks may vary)

GB flexxtrade-gb@teknihall.com

MODEL: FLX-02-TW PRODUCT CODE: 93282

08/2016

YEARS WARRANTY

P043000210





Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits:

Warranty period: 3 years from date of purchase.

Costs: Free repair/exchange.

No transport costs.

Hotline: Free of charge, mobile networks may very.

ADVICE: Please contact our service hotline by phone, e-mail or fax

before sending in the device. This allows us to provide support in the event of possible operator errors.

In order to make a claim under the warranty, please send us:

 the faulty item together with the original purchase receipt and the completed warranty card.

• the product with all components included in the packaging.

The warranty does not cover damage caused by:

- Accident or unanticipated events (e.g. lightning, water, fire).
- Improper use or transport.
- Disregard of the safety and maintenance instructions.
- Other improper treatment or modification.

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights. In the event that a product is received for repair, neither the service company nor the seller will assume any liability for data or settings possibly stored on the product by the customer.



Spend a little Live a lot

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD. PO BOX 726, NAAS, CO. KILDARE. Visit us at www.aldi.com

AFTER SALES SUPPORT





(free of charge, mobile networks may vary)





(GB) flexxtrade-gb@teknihall.com (IRE) flexxtrade-ie@teknihall.com

MODEL: FLX-02-TW

PRODUCT CODE: 93282

08/2016

